

## How to Replace the Thermostat on a PCM Excalibur Engine (Example is on 2006 210 Nautique)

Tools Needed:

6mm Hex

10mm Socket


14mm Socket

Screw Driver


Pry bar



Unscrew the 3 plastic nuts from the engine cover with the 14mm socket and remove cover

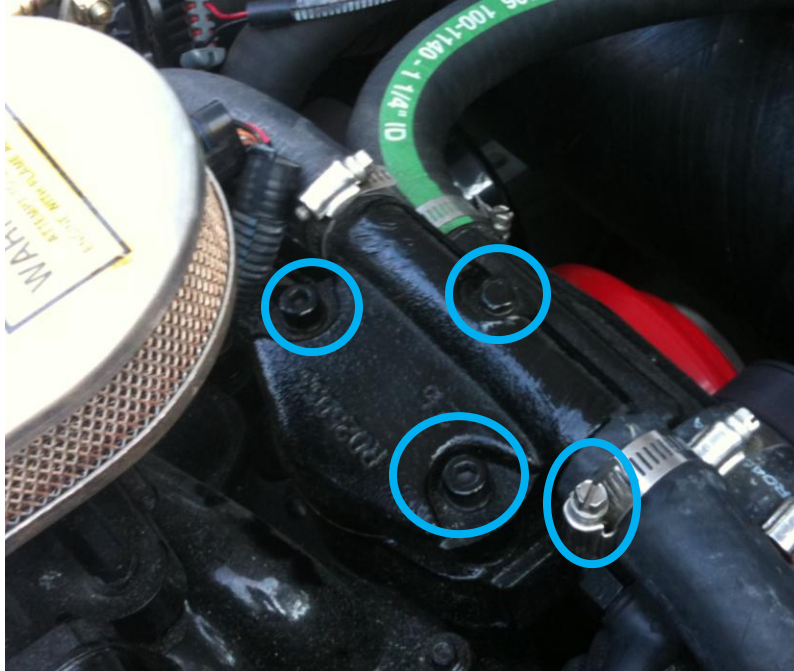

With the 6mm Hex and 10mm socket, remove the bolts  
With the screw driver loosen the hose clamp and then remove the hose only from the one side. You do not have to remove the hose on the opposite side.

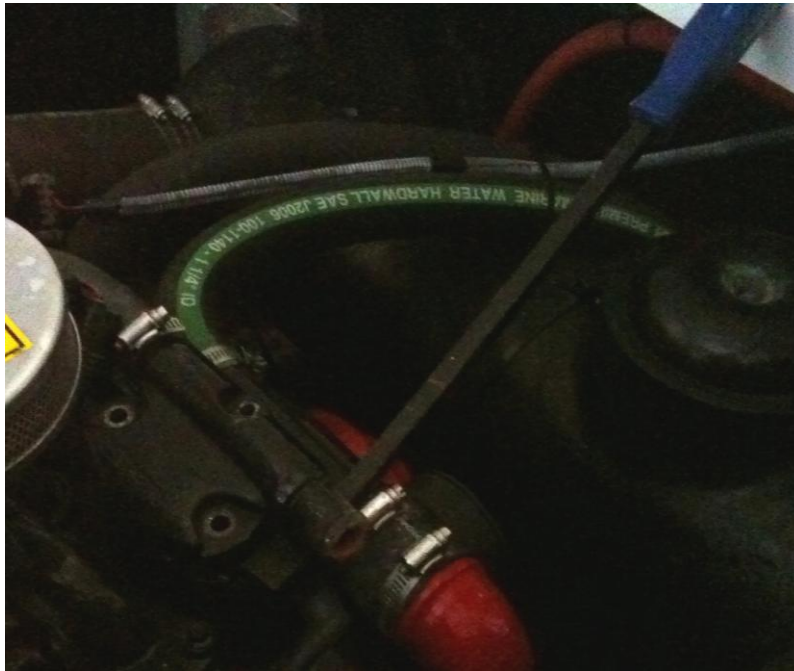

Once the bolts and hose have been removed, the cover of the Thermostat will pop off. You may need to gently use a pry bar to pop the cover off.



Replace the Thermostat and Gasket.

Once you have reassembled everything, except engine cover, hook up a fake-a-lake and start the engine to verify no water is leaking. Once everything checks out, replace engine cover.